


# Configuring Network Licenses on the Client PCs

Note that the instructions in this document apply to all products (example screenshots show the utility being used to select <Product Name> licenses).

Once a license server has been set up, follow this procedure on the client PCs:

1. Install the product software from the installation media.
2. Run **License Manager**.
3. On the **Server** menu, click **Search Network** to list the Sentinel RMS server(s).
4. Select the server that you wish to connect to and click **Change Active Server**.
5. Confirm that you wish to change the active server.
6. Select the **Configure Network Licenses** button.
7. In the dialog, click on a system license and click **<<Reserved** to select it (the list on the left shows the licenses you have selected for your client PC.)

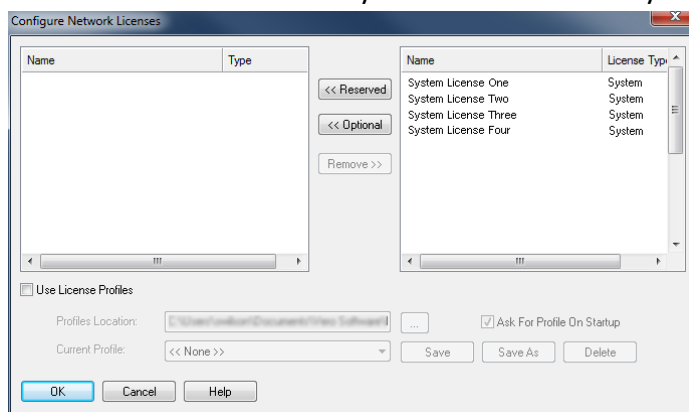


If licenses for multiple Vero brands are installed on the same network license server, any licenses for products not installed on the client PC will be displayed in grey text on the dialog.

Once you have reserved a system license, you can add another system license as **<<Optional**. If the reserved license is not available, the optional system license will be used (if available).

After reserving a system license, the list on the right may show additional module licenses. You can only select a module after you have selected a system license.


8. Click on a module license and click **<<Reserved** or **<<Optional** to select it.

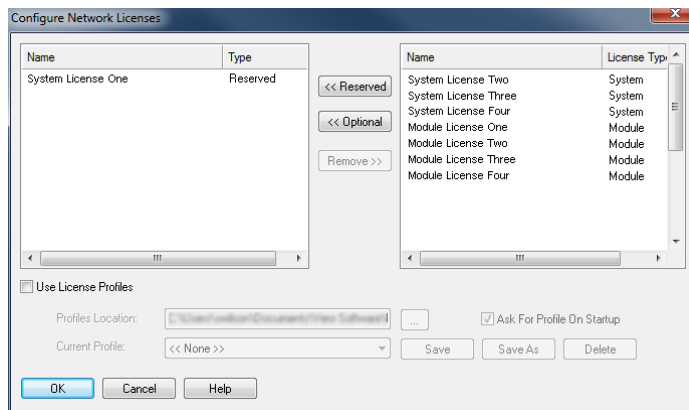

If a module has been selected using the **<<Reserved** button and is unavailable at run time, the software will not start; even if the system license is available.

However, if the module has been selected using the **<<Optional** button (as in the example below) and is unavailable at run time, you will still be able to start the software (provided the system license is available.) In that case, only the functionality covered by the system license will be available for use.

The selected module is moved to the left. Repeat for other licenses, if necessary.

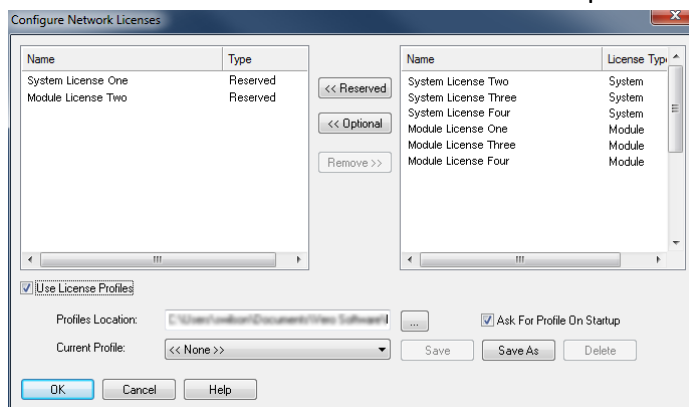


You can now run the software using the functionality covered by the selected licenses (seen on the left in the list above.)

Please note these licenses are only effectively 'pre-selected' for your PC. To run the software, the licenses must be available on the server at run time.


### To remove a license from a configuration

To remove a license, click on the license (in the list on the left) and click **Remove >>**. If you remove a license that is a prerequisite for other licenses, the 'dependent' licenses will also be removed.

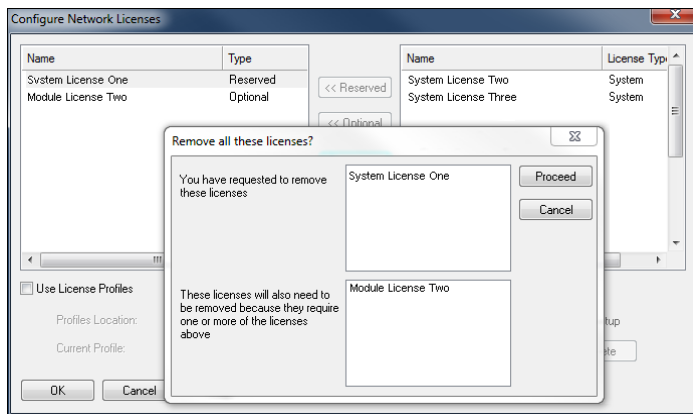

### To use License Profiles

Network License Profiles allow you to save your selection of system and module licenses as a single profile. You can specify a profile to use when you are configuring your Profiles or select one from the list that is displayed when you run the licensed application.

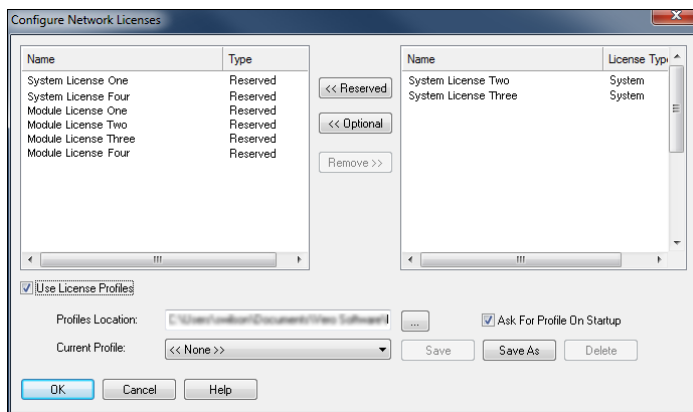


### Enabling License Profiles

1. In the Configure Network Licenses dialog, click **Use License Profiles** to enable the option.
2. Enter a **Profiles Location** if you want it to be different to the default location. Use the **Browse** button to select a directory and then the **Select Location** button, if required.

### Creating a License Profile

1. Select the system and module licenses that you wish to include in the Profile.
2. Select the **Save** button, enter a name for the Profile and select **OK**. The Profile will now appear in the **Current Profile** field.
3. To create another Profile, configure your system and modules licenses and then select the **Save As** button to save it under a new name. Repeat the procedure to create all the Profiles that you require.

- Click **Ask For Profile On Startup** if you want select a Profile from the list of those available when starting a licensed application:

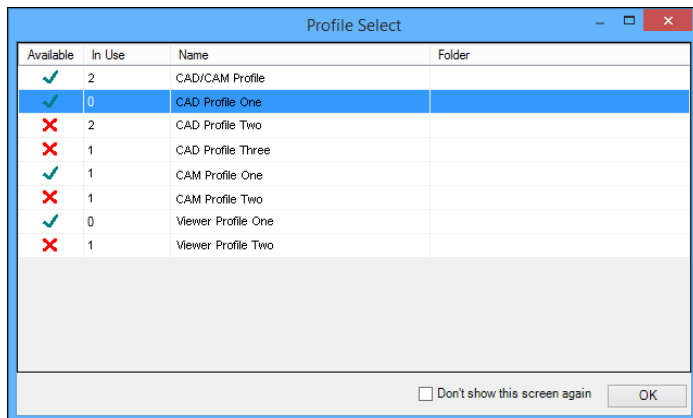

If this option is not checked, the profile displayed in the Current Profile field will be used when starting the licensed application.

- You have now defined your Profiles; select **OK** on the dialog and start your licensed application.

### Editing and Deleting License Profiles

- To edit an existing Profile, open the Configure Network Licenses dialog, select the Profile that you wish to edit and you will see its current system and module licenses displayed. Edit the system and module licenses, as required, and then select Save to update the Profile or Save As to save the configuration under a new Profile name.
- To delete a Profile, select it in the Current Profile list and click the Delete button to remove it from the list.

### Sharing License Profiles

All network licensing users can create their own set of License Profiles, and you can also copy them to a shared folder on a nominated network PC so that all users can access the same ones.

- To share a set of Profiles on a shared folder, copy the set of .xml files that have been stored in the folder which you specified in the **Profiles Location** field to the new location. Note that there is one .xml for each Profile and the names match the Profile name i.e. CAD Profile One.xml.
- In the **Profiles Location** field, browse to the new shared location and select the **Select Location** button. The list of Profiles in the **Current Profile** field will now list the shared Profiles.